

ALUMINUM A-FRAME INSTALLATION

SET UP



STEP 1

Open all the end and center 'A' frames



STEP 3

Push fit the top horizontal tubes into the 'A' frames, ensure the plastic joiners face inwards



STEP 2


Push each locking arm down to secure the frame



STEP 4

Push fit the bottom horizontal tubes into the 'A' frames, ensure the plastic joiners face inwards

GRAPHIC ATTACHMENT

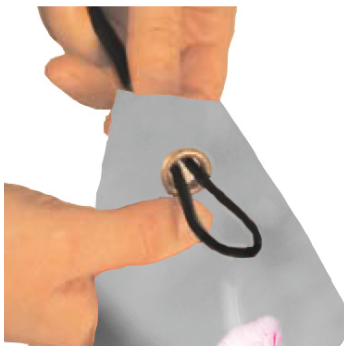

STEP 1

Pass the elastic bungee cord through the graphic eyelet



STEP 3

Corner eyelets require a bungee cord loop around the top and side of the frame to properly secure



STEP 2

Secure elastic bungee around the frame with hook



PLEASE CONTACT US WITH ANY QUESTIONS!

800-898-3022 | sourceonedigital.com

